

Instruction




1) Make target design by computers. Switch on the cutting plotter and better try the pressure of tool in the first step: After cutting, the color layer as well as one layer of base paper can be easily removed at the same time.




2) The tool should just cut half thickness of the base paper.



3) There are 35 colors vinyl transfer you can choose.

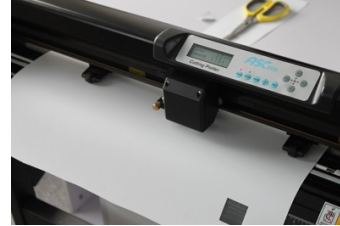

4) Set the speed according to the size of the design. For example, set the speed faster (at 50-75) for a large design, and at 25 definitely for a small one. Pressure is about 150g. Low speed cutting is very important!

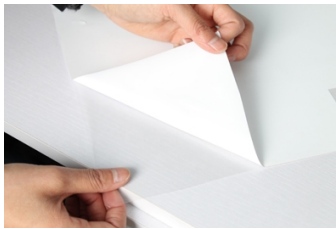

5) Peel off the unwanted color layer part when finish cutting.



6) The design on base paper should be complete without any deletion. If you peel the wanted parts, you can press it back then continue.



7) Press by heat press, Set the temperature at 150°C-175°C (310F-350F) and the time at 10s -15s. The temperature & time is not absolute, You should adjust on actual status.



8) Press by home Iron. Set the temperature at 150°C-175°C (310F-350F).



9) Cool peel the base paper.



10) A wanted design will be on your unique T-shirt completely.